

Lube Oil Analysis Management System

Quick Start Guide: Administrator Advanced



Administrator Advanced



- ► Learn about:
- 1. Creating customized roles in LOAMS
- 2. Searching and moving users in the hierarchy
- 3. Modifying accounts
- 4. Applying equipment restrictions for worksites

Data Access & Roles



LOAMS gives you the ability to be the administrator for your company. The Admin tab lets you add and manage users, assign permissions and roles to users, and modify accounts.

When setting up a new user there are two things to take into account – Data access and Roles. See definitions below:

Data Access

Determines
 worksites and
 equipment viewed
 by user

Roles


(Permission Levels)

 Determines what features a user has access to

Data Access Explanation



Below is an example of Data Access: Our user is set up at the Region #1 folder and online he can view Region #1, Worksite #1, 2, and 3.

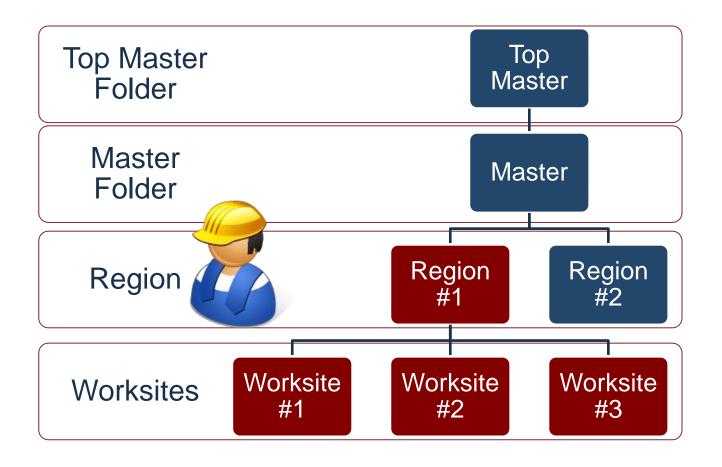

Roles Explanation



When setting up a new user you must assign a role to them. Roles determine what features a user has access to. By default most users are set up as Sampler + Reports. Below explains each default role:



Administrator

- Manage Users, Add/Modify user accounts
- Equipment Management, Move/Update Unit & Component Records
- Run Management Reports



Manager

- Equipment Management, Move/Update Unit & Component Records
- •Run Management Reports



Sampler + Report

- Can Only View Equipment / Print Labels
- •Run Management Reports




Sampler

• Can Only <u>View</u> Equipment / Print Labels

Creating a Custom Role





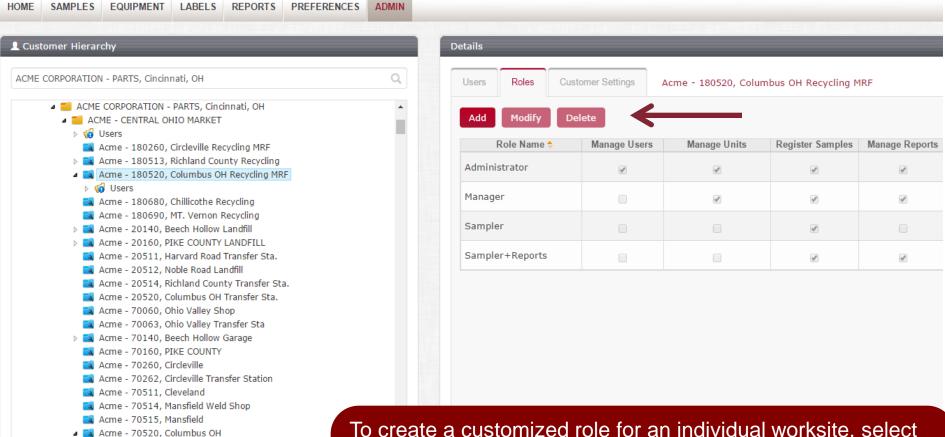


To create a customized role for an individual worksite, select the *Worksite* from the hierarchy tree on the left side of the page. If you want the custom role to be applied to multiple locations, select on the *Master Folder* in the tree. On the right side, click on the *Roles* tab and then click the *Add*

button.

Creating a Custom Role




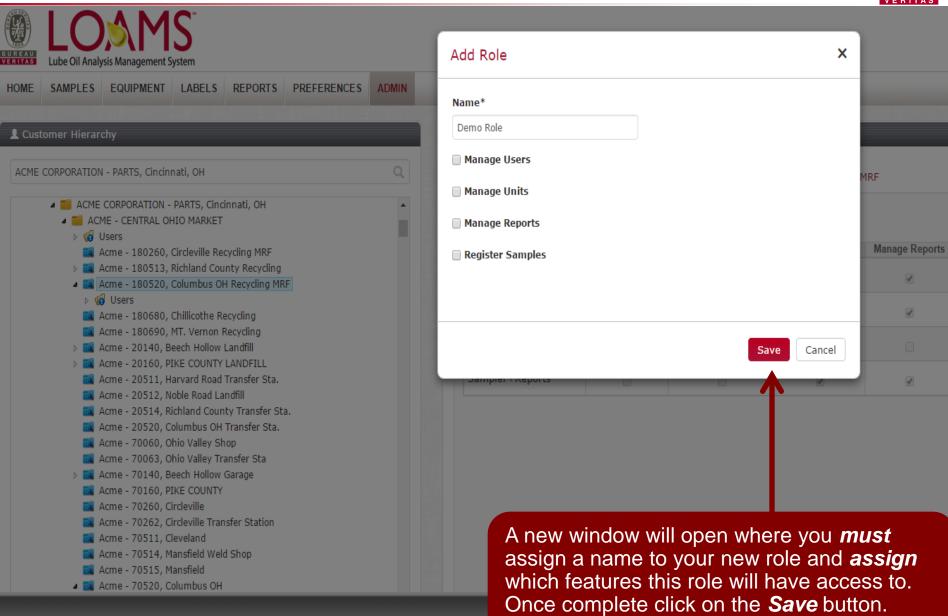

Modifying/Deleting a Role





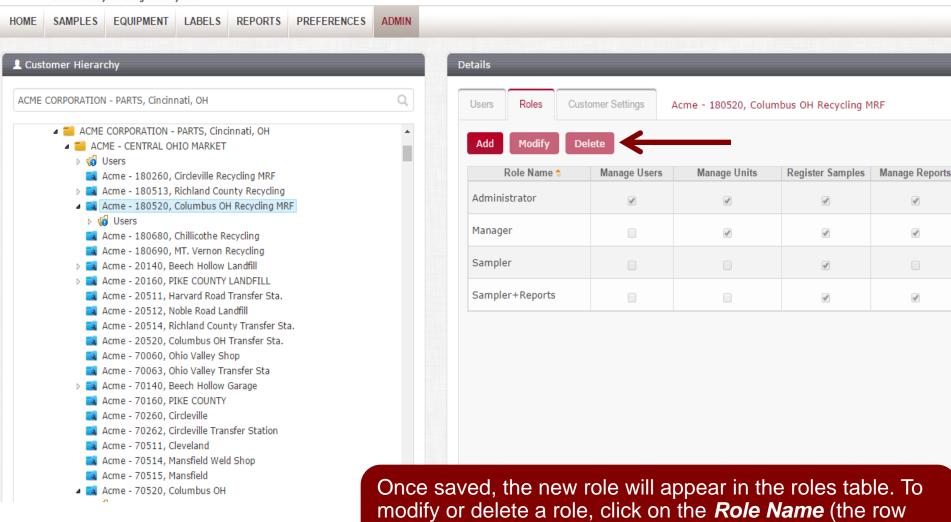


buttons.

will highlight in gray) and then click the *Modify* or *Delete*

Searching for Users





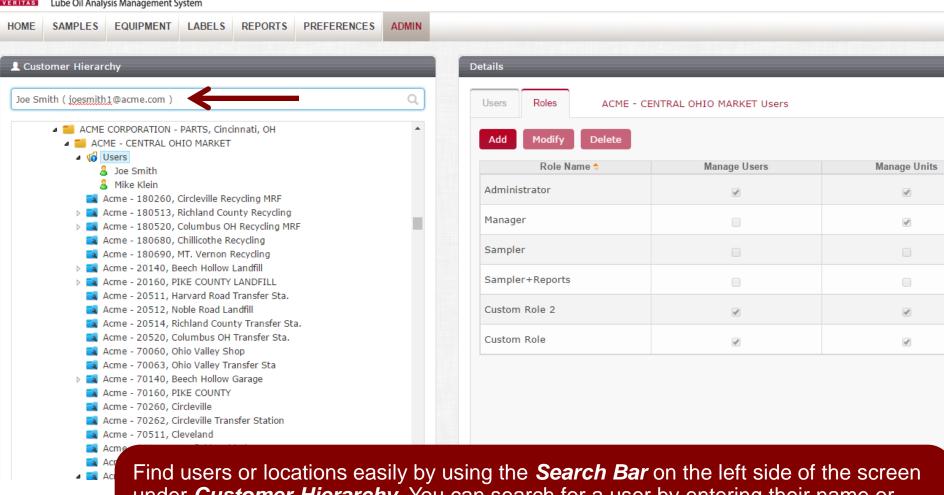


under *Customer Hierarchy*. You can search for a user by entering their name or email address. You can also search for a location by entering the company name. A drop down list will appear with results that match your search criteria. Select the user or company you're searching for by clicking on the name in the list.

Searching for Users






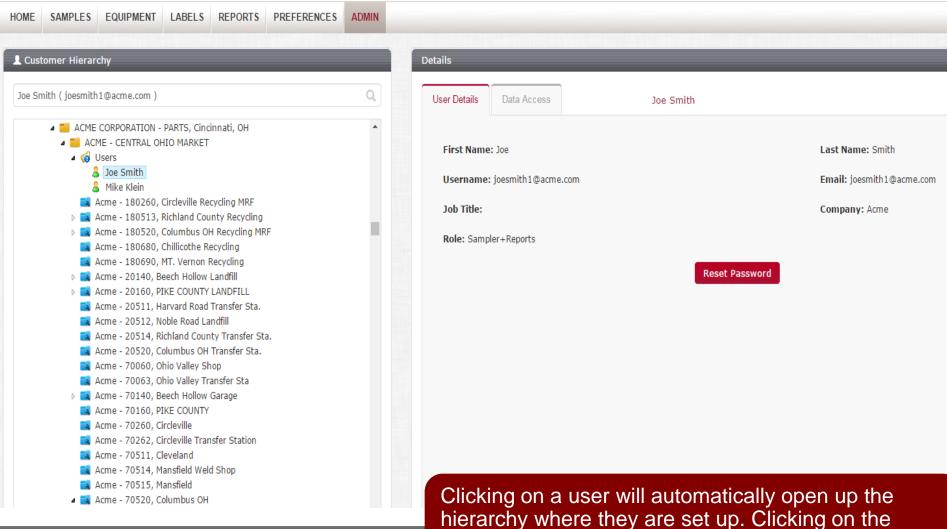

worksite will bring you to the worksite folder.





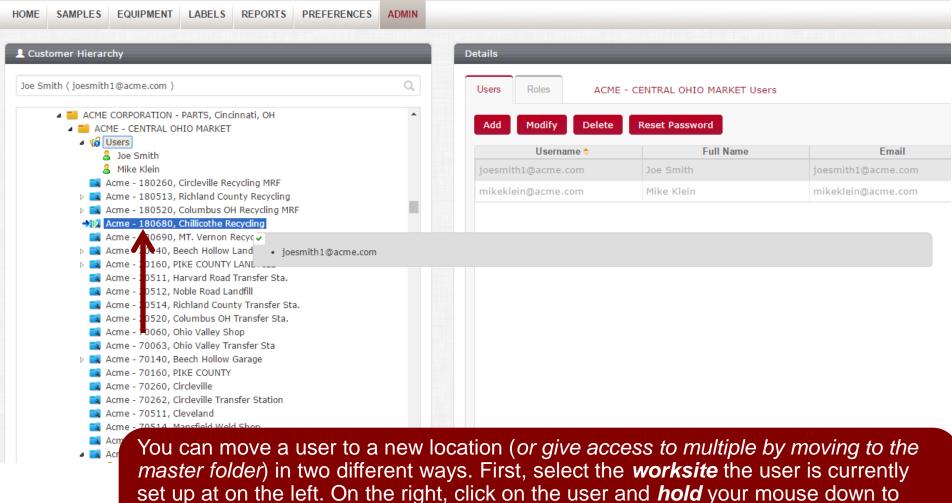

and the username with a green checkmark.

drag and drop them on top of the new location you want them to be at. Release your mouse when you see the new location highlighted in blue with a small green arrow




Lube Oil Analysis Management System				
Lube Oil Analysis Management System	Save	User		×
SAMPLES EQUIPMENT LABELS REPORTS PREFERENCES	ADMIN Userna	me*		_
tomer Hierarchy	joesmi	th1@acme.com		
	First Na	ame*	Last Name*	_
imith (joesmith1@acme.com)	Joe		Smith	
■ ACME CORPORATION - PARTS, Cincinnati, OH			Sindi	
▲ MACME - CENTRAL OHIO MARKET	Compa	лу	Job Title	
✓ ⑥ Users A joe Smith	Acme			Email
& Mike Klein	Email*		Confirm Email	cme.co
Acme - 180260, Circleville Recycling MRF		th1@acme.com		me.co
	Joesini	,iii@acine.com		
Acme - 180680, Chillicothe Recycling	Address	5 1	Address 2	
Acme - 180690, MT. Vernon Recycling				
	Phone		State / Province	
Acme - 20511, Harvard Road Transfer Sta.		240 5000		
📉 Acme - 20512, Noble Road Landfill 🔯 Acme - 20514, Richland County Transfer Sta.	(310)	219-5000	CA	
🙀 Acme - 20520, Columbus OH Transfer Sta.	City		Role*	_
📉 Acme - 70060, Ohio Valley Shop 🎮 Acme - 70063, Ohio Valley Transfer Sta			Sampler+Reports	▼
Acme - 70140, Beech Hollow Garage Acme - 70160, PIKE COUNTY	Langua	ige*		
Acme - 70260, Circleville	English	h	•	_
Acme - 70262, Circleville Transfer Station Acme - 70511, Cleveland				_
Acme - 70511, Cleveland Acme - 70514, Mansfield Weld Shop				_
📉 Acme - 70515, Mansfield				
			Save User	Cancel
OSERS				

A screen will open up where you can make further adjustments if needed. Click **Save User** to save the customer in their new location.






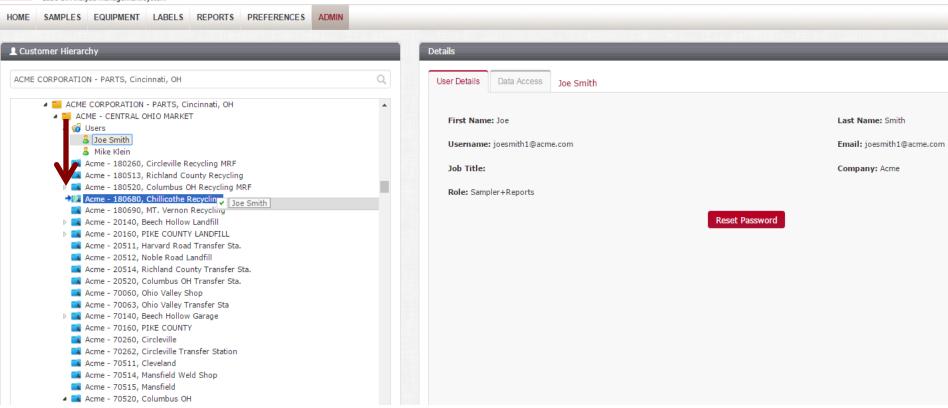

Users can also be moved on the left side of your screen by expanding the users folder. From there, select the user you'd like to move, *hold* your mouse down to drag and drop the user to the new location. *Release* your mouse when you see the new location highlighted in blue with a small green arrow and the username with a green checkmark



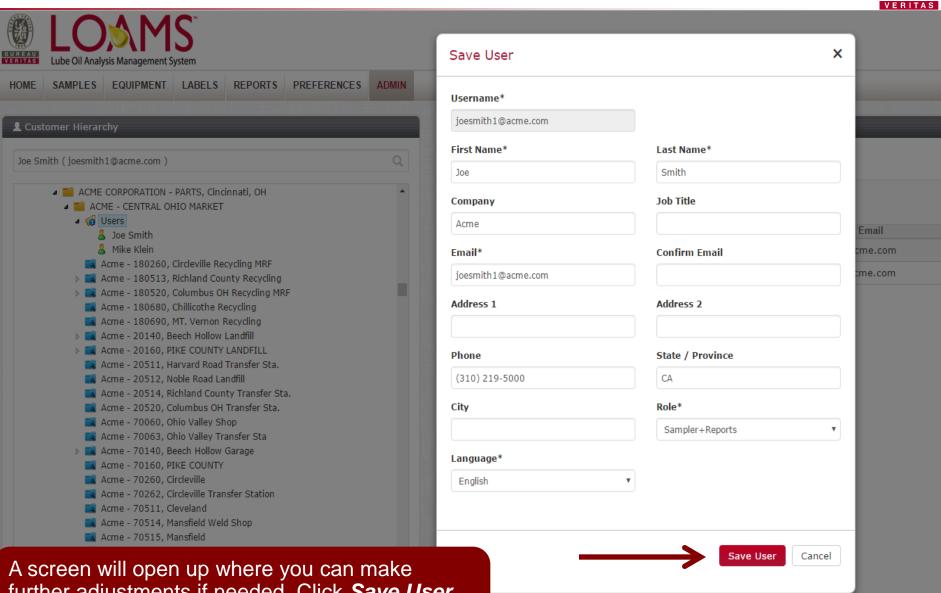

further adjustments if needed. Click **Save User** to save the customer in their new location.

Save User






SAMPLES EQUIPMENT LABELS REPORTS PREFERENCES **ADMIN** Details Customer Hierarchy ACME CORPORATION - PARTS, Cincinnati, OH Q User Details Data Access Joe Smith ACME CORPORATION - PARTS, Cincinnati, OH ■ ACME - CENTRAL OHIO MARKET First Name: Joe Last Name: Smith ■ ⑤ Users Mike Klein Username: joesmith1@acme.com Email: joesmith1@acme.com Acme - 180260, Circleville Recycling MRF Acme - 180513, Richland County Recycling Job Title: Company: Acme Acme - 180520, Columbus OH Recycling MRF ▲ Acme - 180680, Chillicothe Recycling Role: Sampler+Reports Joe Smith Reset Password Acme - 180690, MT. Vernon Recycling Acme - 20140, Beech Hollow Landfill Acme - 20160, PIKE COUNTY LANDFILL Acme - 20511, Harvard Road Transfer Sta. Acme - 20512, Noble Road Landfill Acme - 20514, Richland County Transfer Sta. Acme - 20520, Columbus OH Transfer Sta. Acme - 70060, Ohio Valley Shop Acme - 70063, Ohio Valley Transfer Sta Acme - 70140, Beech Hollow Garage Acme - 70160, PIKE COUNTY Acme - 70260, Circleville Acme - 70262, Circleville Transfer Station Acme - 70511, Cleveland Acme - 70514, Mansfield Weld Shop ຊ Acme - 70515, Mansfield ▲ Acme - 70520, Columbus OH

Once moved, the user will display under the new folder or worksite they were moved to.

Modifying Worksites






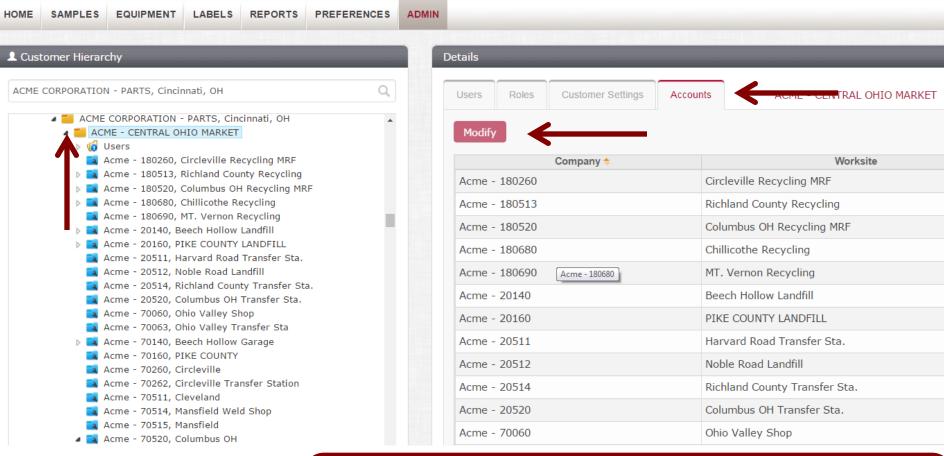

To modify a worksite, select the *Master* folder on the left. On the right, click on the *Accounts* tab. Select the worksite you want to update by clicking on the *Company Name* (row will highlight gray when you do this) and then click the *Modify* button.

Modifying Worksites




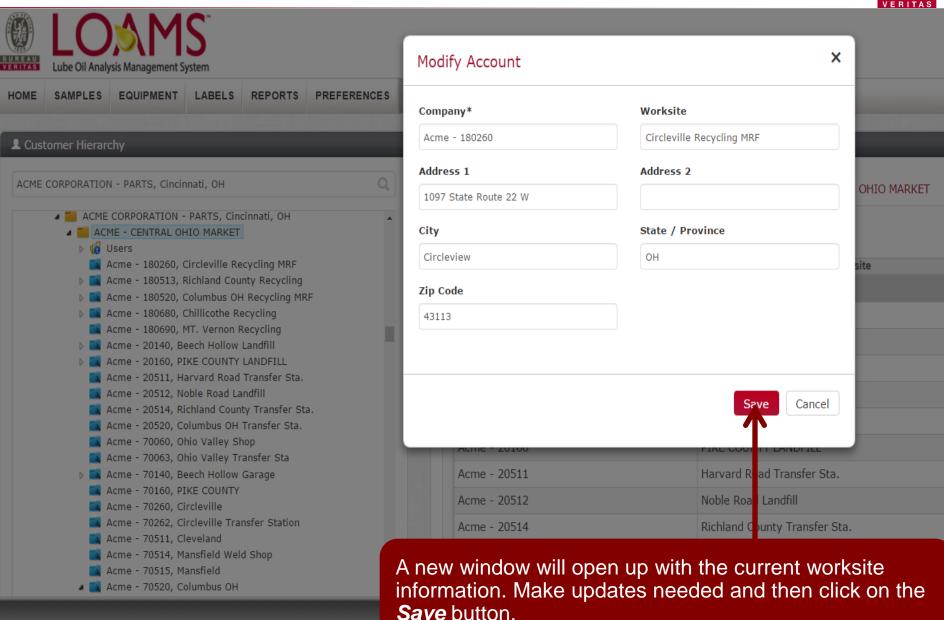

Equipment Restrictions





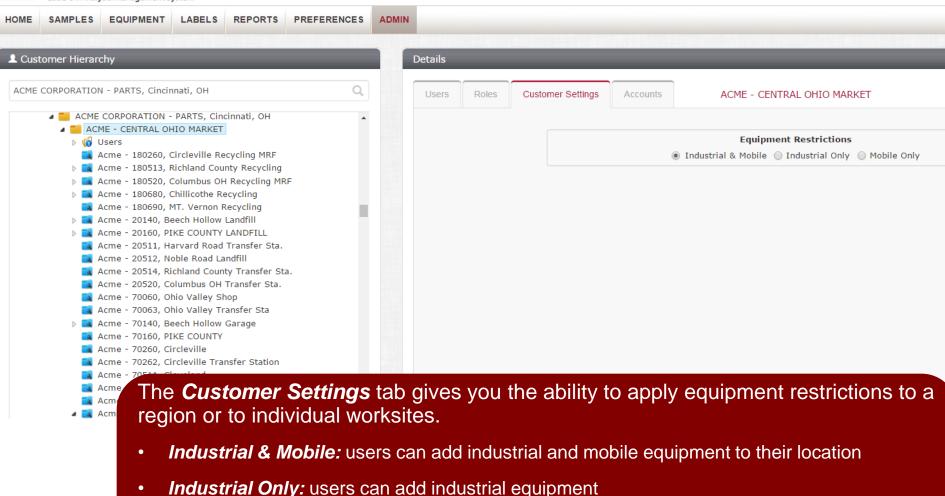

**For more detailed instructions, please view Equipment Quick Start Guide

Mobile Only: users can add mobile equipment





LOAMS® SUPPORT DESK:

Phone: 1-800-655-4473

Email: LOAMS@us.bureauveritas.com

www.AnalystsIncOnline.com

www.AnalystsInc.com/LOAMS-Resource-Center