

SM

Lube Oil Analysis Management System

Quick Start Guide: Administrator Basics



Administrator Basics



- ► Learn about:
- 1. Adding users to the LOAMS system
- 2. How to modify or delete existing users
- 3. How to reset passwords

Data Access & Roles



LOAMS gives you the ability to be the administrator for your company. The Admin tab lets you add and manage users, assign permissions and roles to users and modify accounts.

When setting up a new user there are two things to take into account – Data access and Roles. See definitions below:

Data Access

Determines
 worksites and
 equipment viewed
 by user


Roles (Permission Levels)

 Determines what features a user has access to

Data Access Explanation



Below is an example of Data Access, because our user is set up at the Region #1 folder, online he can view Region #1, Worksite #1, 2, and 3.

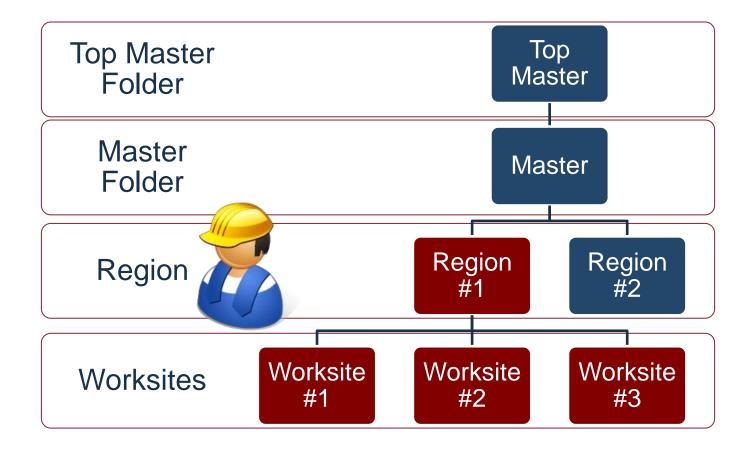

Roles Explanation



When setting up a new user you must assign a role to them. Roles determine what features a user has access. By default, most users are set up as Sampler + Reports. Below explains each default role:



Administrator

- Manage Users, Add/Modify user accounts
- Equipment Management, Move/Update Unit & Component Records
- •Run Management Reports



Manager

- Equipment Management, Move/Update Unit & Component Records
- •Run Management Reports



Sampler + Report

- •Can Only View Equipment / Print Labels
- •Run Management Reports




Sampler

Can Only <u>View</u> Equipment / Print Labels

Adding New Users





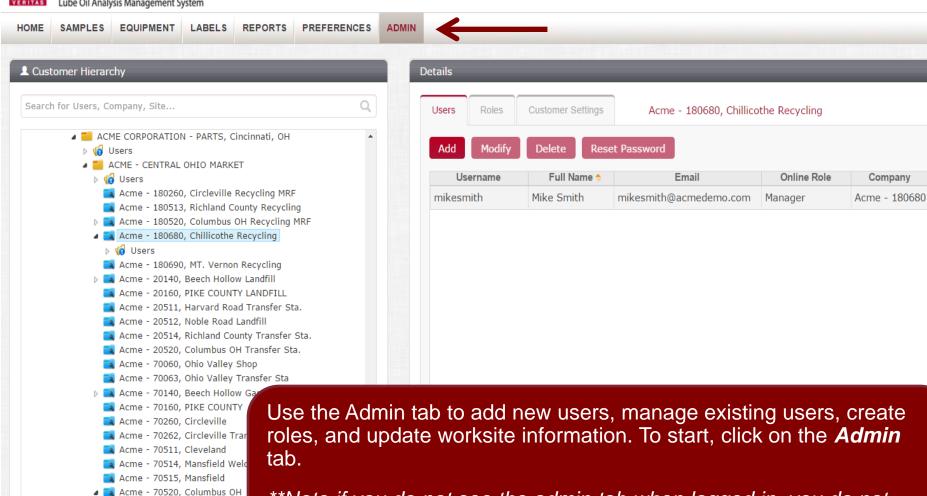

**Note if you do not see the admin tab when logged in, you do not have admin privileges. Please contact your company admin or the LOAMS support desk

Adding New Users


🔼 Acme - 70262, Circlev

Acme - 70511, Clevel

🔼 Acme - 70514, Mansfi Acme - 70515, Mansfi

🗸 ز Acme - 70520, Colum



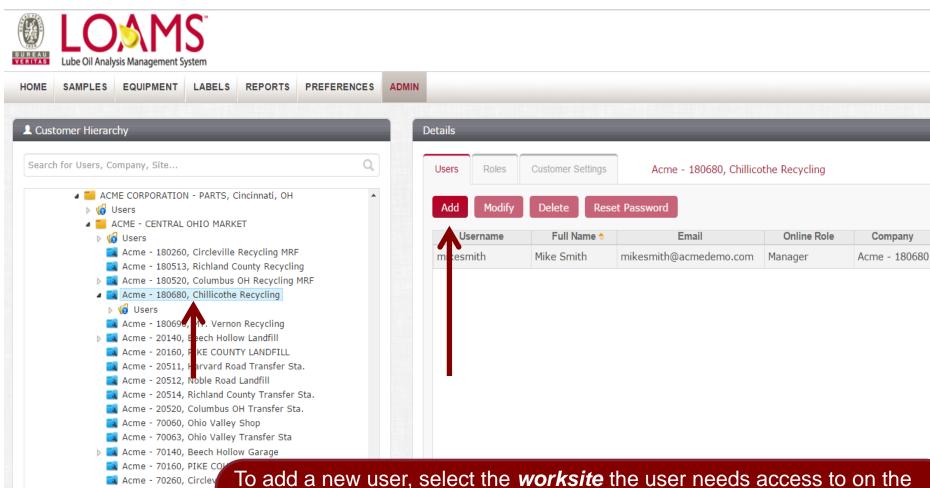


left. If a user needs access to multiple locations, they must be added to the folder a level above or a master folder level. Once your selection has been made, click on the *add* button.

**Note: You are not able to see users that have the same hierarchy level access as you do.

Adding New Users



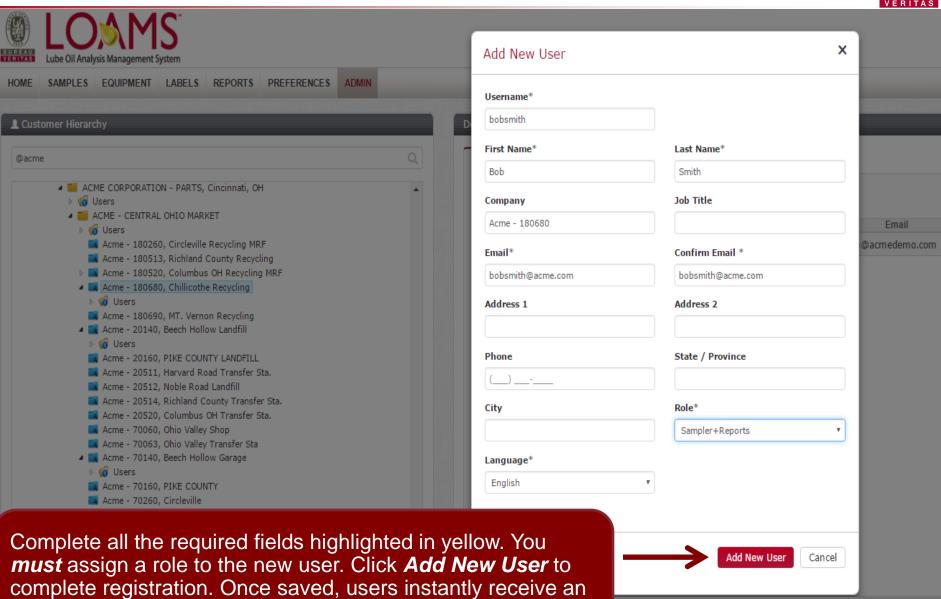


email with their username, password, and login instructions.

Modifying Users





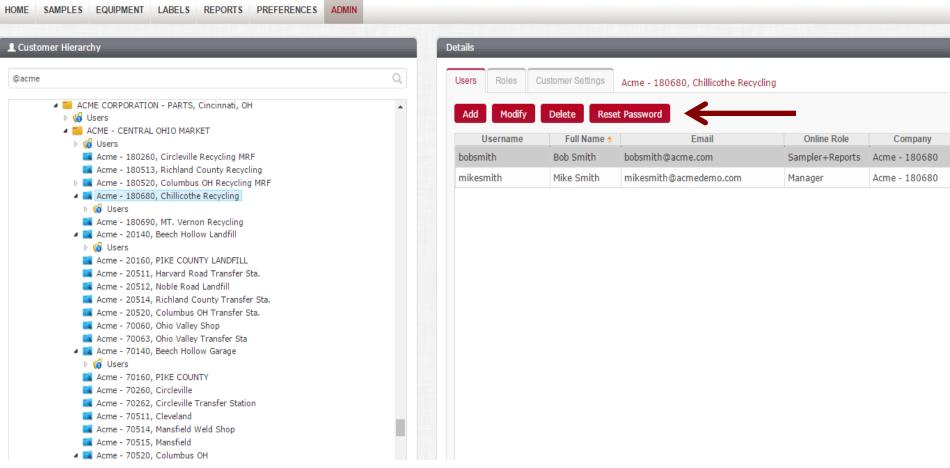

Select the user's **worksite** on the left to modify, delete, or reset their password. On the right, select the user and then select modify, delete, or reset password.

User Details



Need Help (?)



Select Language **■ English**

LOAMS Admin ▼ Last login on 12/28/2017

SAMPLES EQUIPMENT LABELS HOME REPORTS PREFERENCES ADMIN Ouick Search Customer Hierarchy Details Bob Smith (bobsmith / bobsmith@acme.com) User Details Bob Smith ACME CORPORATION - PARTS, Cincinnati, OH First Name: Bob Last Name: Smith ACME - CENTRAL OHIO MARKET Username: bobsmith Email: bobsmith@acme.com Acme - 180260, Circleville Recycling MRF. Acme - 180513, Richland County Recycling Job Title: Company: Acme - 180680 🚺 Acme - 180520, Columbus OH Recycling MRF Acme - 180680, Chillicothe Recycling Role: Sampler+Reports ■ William

■ Users Bob Smith Mike Smith Reset Password Acme - 180690, MT. Vernon Recycling Acme - 20140, Beech Hollow Landfill Acme - 20160, PIKE COUNTY LANDFILL Acme - 20511, Harvard Road Transfer Sta. 🔼 Acme - 20512, Noble Road Landfill Acme - 20514, Richland County Transfer Sta. Acme - 20520, Columbus OH Transfer Sta. Acme - 70060, Ohio Valley Shop 🐧 Acme - 70063, Ohio Valley Transfer Sta Acme - 70140, Beech Hollow Garage 🙀 Acme - 70160, PIKE COUNTY Acme - 70260, Circleville Acme - 70262, Circleville Transfer Station Acme - 70511, Cleveland 🔼 Acme - 70514, Mansfield Weld Shop 🔼 Acme - 70515, Mansfield

Expand the users folder on the left to view all users listed under a worksite. On the right, the *User Details* tab shows you user information and an option to reset their password.


Data Access




Need Help (?)

Select Language | **■ English** •



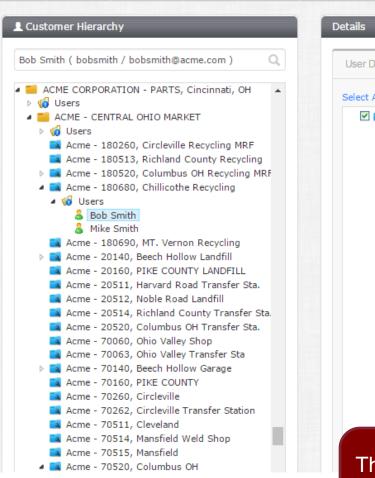

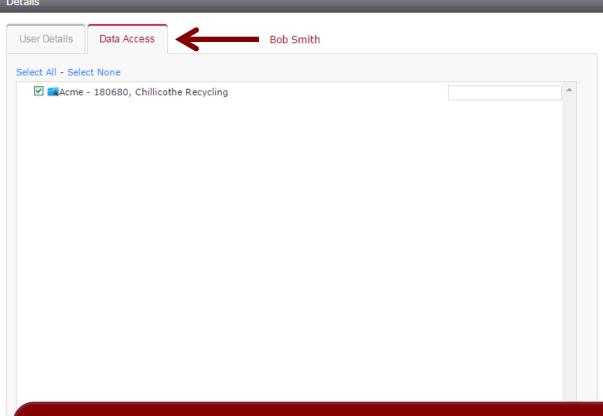

The **Data Access** tab allows you to modify which worksite a user views. If the checkbox is selected next to a location, the user can view the worksite online.





LOAMS® SUPPORT DESK:

Phone: **1-800-655-4473**

Email: LOAMS@us.bureauveritas.com

www.AnalystsIncOnline.com

www.AnalystsInc.com/LOAMS-Resource-Center