





## **Quick Start Guide**

Changing Filter Properties, Type and Values

O Objectives:

- Access the manage filters section
- 2 Explore filter properties, type and values
- **3** Change a filter property, type or value in LOAMS

Manage F





## Changing Filter Properties

- O Changing filters in LOAMS is possible by following the 3 steps below:
- Hover your cursor over the preferences tab and select the filters option from the drop down menu.
- Find and select the name of the filter you plan to modify from the filter's box located at the left of your screen.
- 3 Select the property, type or values within the filter that you plan to modify, make your changes, and click the save button. You have successfully changed a filter property in LOAMS.

	Filter Name :			Combine conditions	Share in Hierarchy			
R	New Filter	Demo Filter		AND		•	0	
	Delete Filter	Property		Туре			Value	
		City	•	Equals	+	New York C	itγ	
		Worksite	•	Contains	•	Bureau Veri	itas	
		Component	•	Equals		Engine		
		Severity	•			Other 0 Other 1 Normal Monitor Abnormal		
				New Condition Save	Clear			

	INCIDENCES ADMIN			in the second se	a a a n Bington Inni mar (f)
Property		Туре		Value	
Unit Worksite	*	Equals	*	2	Í
				)	

## LOAMS - The Lube Oil Analysis Management System





LOAMS — The Lube Oil Analysis Management System — by Bureau Veritas gives you access to real-time oil analysis data from your computer, tablet or mobile device. LOAMS is:







## LOAMS SUPPORT DESK

**Phone:** 1.800.655.4473 **Email:** LOAMS@us.bureauveritas.com

LOAMS Platform | LOAMS Resource Center

Download the LOAMS Mobile App today